Lenco

INSTRUCTION MANUAL

26” Wide screen LCD TV With DVD

Model No.: DVT-2621

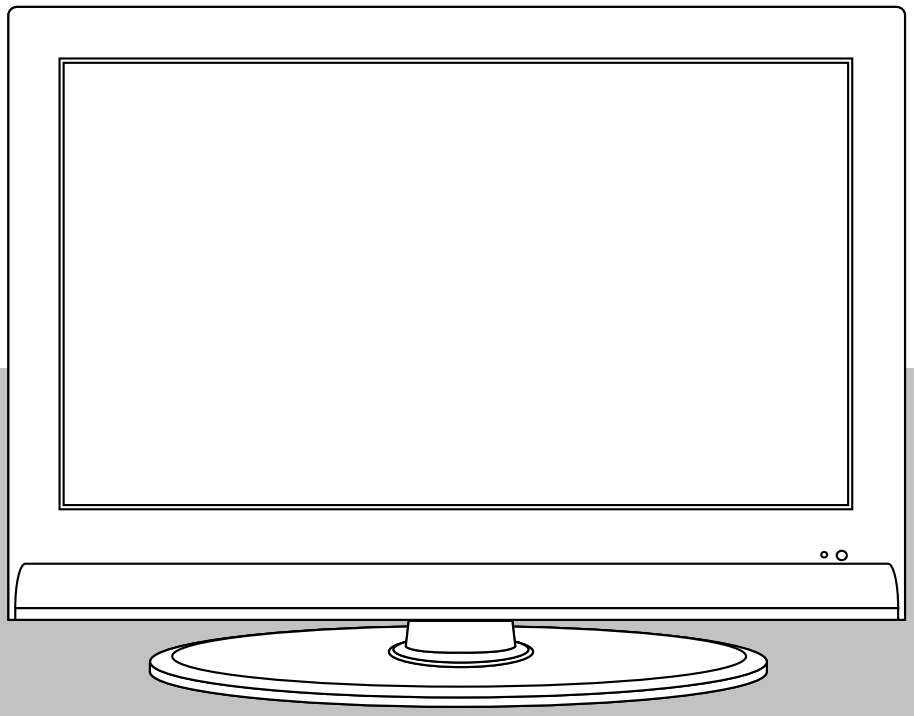

Read all of the instructions before using this TV and keep the instruction manual in a safe place for future reference.

For information and support, www.lenco.eu

Contents

Caution	**2**
Safety Information	**3**
Unit and Accessories	**4**
Product Feature	**4**
Introduction	**5-8**
1. Front View	5
2. Rear View	6
3. Remote Control	7
Basic Operation	**9-10**
OSD Menu	**11-14**
1. Video menu	11
2. Audio menu	12
3. Misc menu	12
4. TV menu	14-15
5. PC menu	15
DVD operation	**16**
System operation	**20**
Simple Troubleshooting	**23**
Technical Specifications	**24**

Caution

The lightening flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.

The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

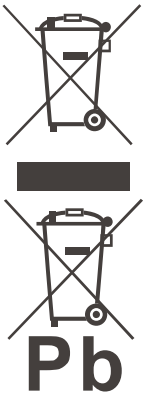

Correct disposal of this Product
(Waste Electrical & Electronic Equipment (WEEE)
Your product is designed and manufactured with high quality materials and components which can be recycled and reused.
This symbol means that electrical and electronic equipment, at their end-of-life should be disposed of separately from your household waste.
Please dispose of this equipment at your local community waste collection/ recycling centre.
In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

This unit complies with European safety and electrical interference directives.

Safety Information

To ensure reliable and safe operation of this equipment, please read carefully all the instructions in this user guide, especially the safety information below.

Electrical safety

- The TV set should only be connected to a mains supply which matches that stated on the label on the mains adaptor
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
  - Do not place any connecting wires where they may be stepped on or tripped over.
  -Do not place heavy items on the leads, which may damage them.
  -Hold the Mains plug, not the wires, when removing from a socket.
  -During a thunderstorm or while leaving the TV for long periods, disconnect the aerial (if outdoor) and mains adaptor from the supply.
  -Do not allow water or moisture to enter the TV or mains adaptor. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.

- Pull the plug out immediately, and seek professional help if:
  -the mains plug or cable is damaged
  -liquid is spilt onto the set, or if it is accidentally exposed to water or moisture
  -anything accidentally penetrates the ventilation slots
  -the set does not work normally.
  -Do NOT remove the safety covers. There are no user serviceable parts inside. You may invalidate the warranty. Qualified personnel only are permitted to service this apparatus.
  -To avoid battery leakage, remove exhausted batteries from the remote control handset, or when not using for along period.
  -Do NOT break open or throw exhausted batteries on a fire.

Physical safety

- Do NOT block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5cm (2") clearance all around the unit.
- Do NOT tap or shake the TV screen, you may damage the internal circuitry. Take good care of the remote control, do not drop it or allow it to come into contact with liquids.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp soft cloth with diluted detergent.

Unit and Accessories

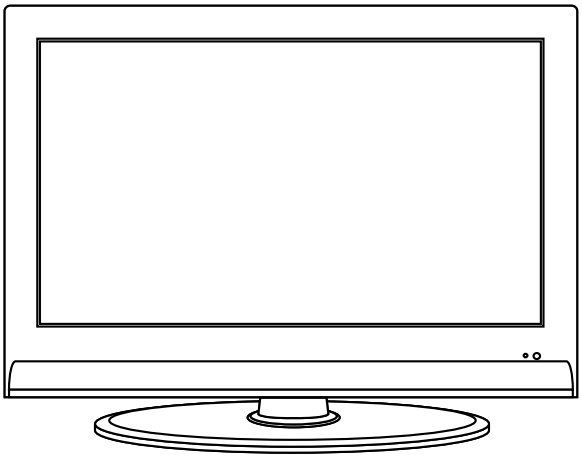

TV set

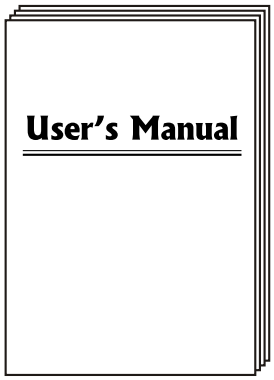

User's manual

Remote control

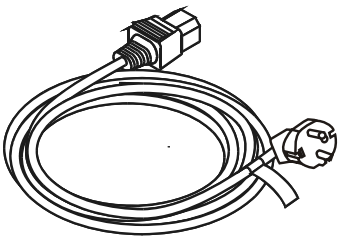

Mains Cable

Product Feature

- Inputs: RF, VIDEO, S-VIDEO, VGA, YPbPr, SCART, HDMI1, HDMI2, DVD
- Audio Input: Audio R/L(YPbPr/VIDEO/SVIDEO), PC Audio
- Support TV mode: PAL(B/G,D/K,I), SECAM(B/G,D/K)
- Support NICAM and FM Stereo
- Search TV: Auto/Manual
- Auto-shutting down
- Program exchange and edit
- Speaker output: 2x8W
- Power(AC 100-240V ～ 50/60Hz)

Introduction

1. Front View

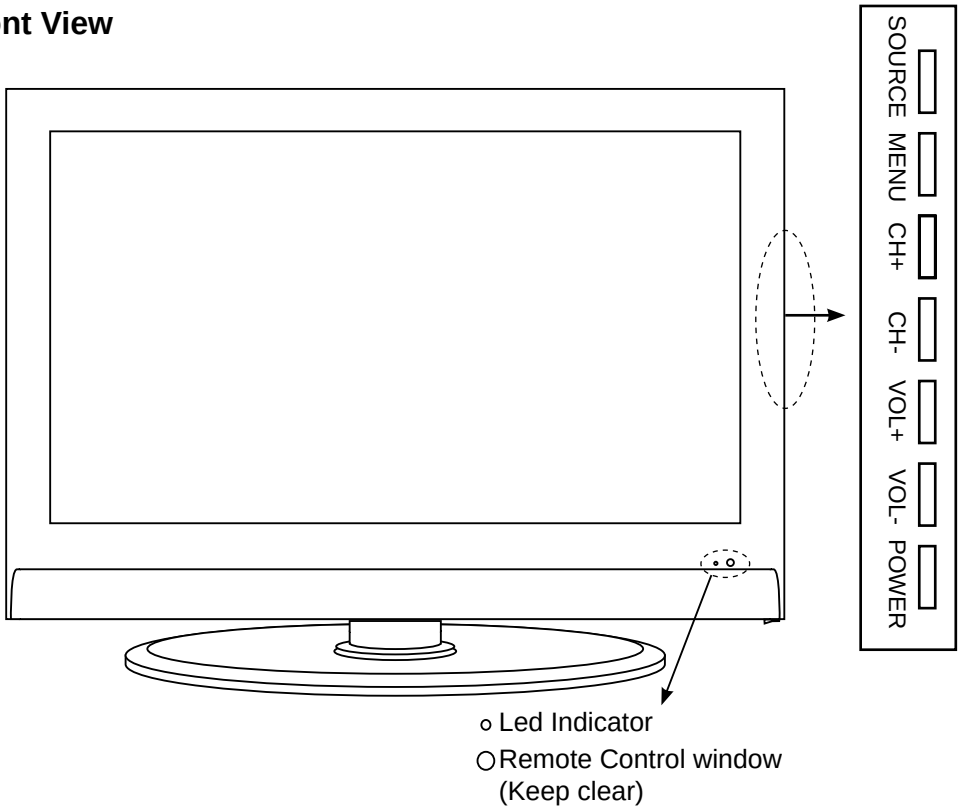

1. (IR) Infrared Receiver: Receives IR signals from the remote control.
   (Power on/Standby)LED Indicator: Press **POWER** to turn on and off.

Indicator on(Red)	Standby mode
Indicator on(Green)	Power on mode

The effective receiving range for the signal is 5-8 metres from the front of the remote control window, and 30^0 to the left or right side and 20^0 above or below the remote control window.

2. The functions of the buttons are described as bellows:
   SOURCE: Press to display the input source menu.
   MENU: Press to display the OSD menu, press again to exit the menu.
   CH+/-: Press to scan through channels.
   VOL+/-: Press to adjust the volume.
   POWER: Turn on/standby the TV set.

Press **SOURCE** button on the TV set or remote control to display the input source menu, and use **CH+/-** button on the TV set or ∧ / ∨ button on remote control to select the input source, press **ENTER** button on the remote control to enter.
Note: Before you select the input source, make sure the connections are prepared.

2. Rear View

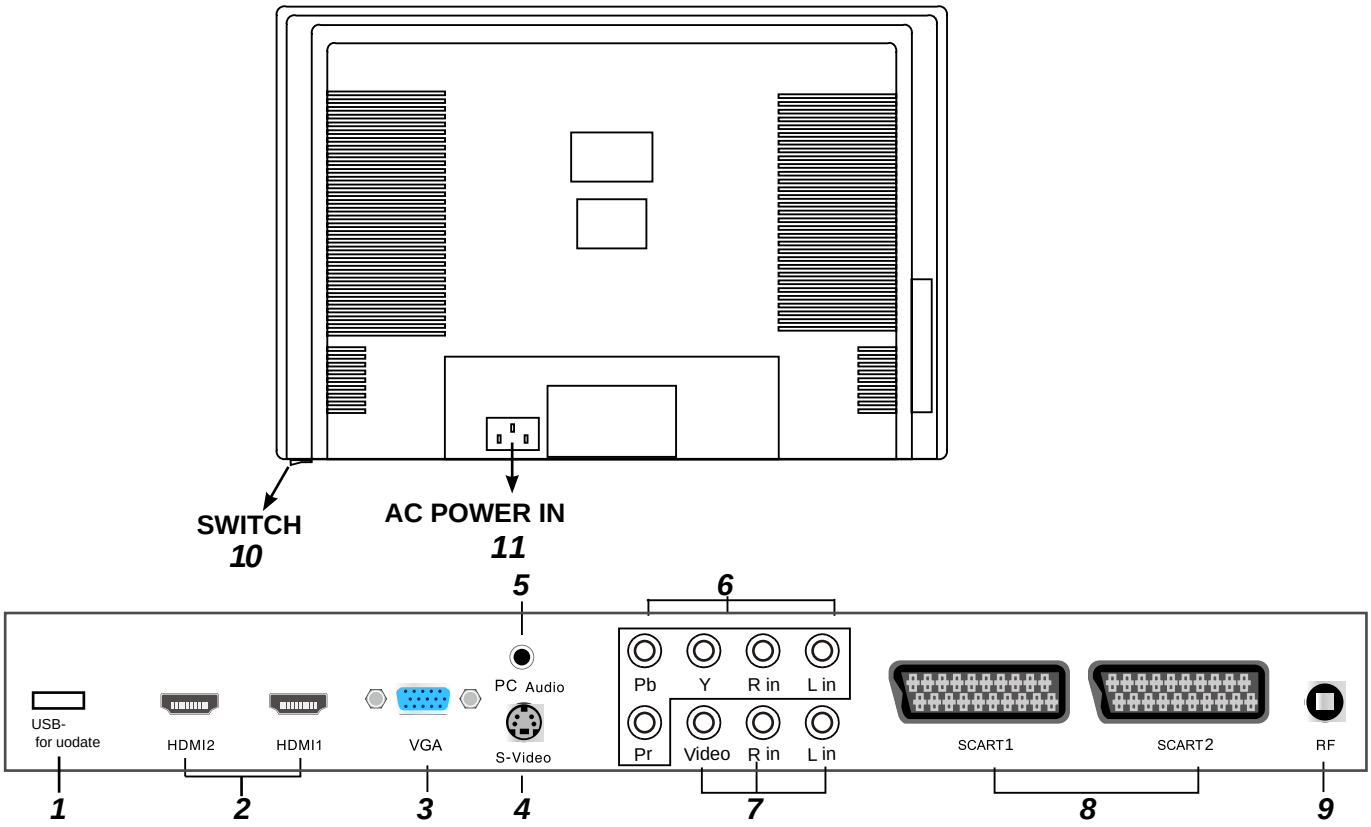

1. **USB:** Software update.
2. **HDMI1/2/:** Connect it to the HDMI of DVD or other equipment.
3. **VGA:** For PC display.Connect it to the D-Sub 15 pins analog output connector of the PC.
4. **S-VIDEO:** Connect it to S-VIDEO output terminal of DVD.
5. **PC AUDIO:** Connect it to the audio output terminal of PC.
6. **YPbPr:** Connect them to the video output terminal of DVD.(used in YPbPr source). Connect them to the audio output terminal of DVD(with YPbPr).
7. **VIDEO:** Connect it to video output terminal of DVD.
   L/R in: Connect them to the audio output terminal of DVD(Shared with VIDEO/ S-VIDEO/ YPbPr).
8. **SCART1/2**：Connect them to the composite terminal of DVD.
9. **RF:** Connect antenna or cable 75 Ohm coaxial to receive TV signal.
10. **AC POWER IN:** Connect to an earth 100-240V,50-60Hz AC outlet with the Power Cable.
11. **SWITCH:** Switch on or off the power suply.

- To turn on the LCD TV
  Press – ○ on the back of the LCD TV to – first.

- Be sure to turn off the power and unplug both units from the wall outlet before making any connections.

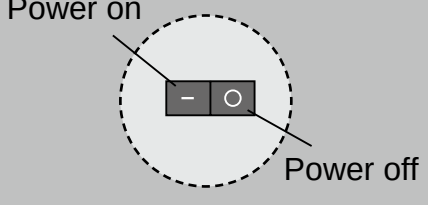

Remote Control

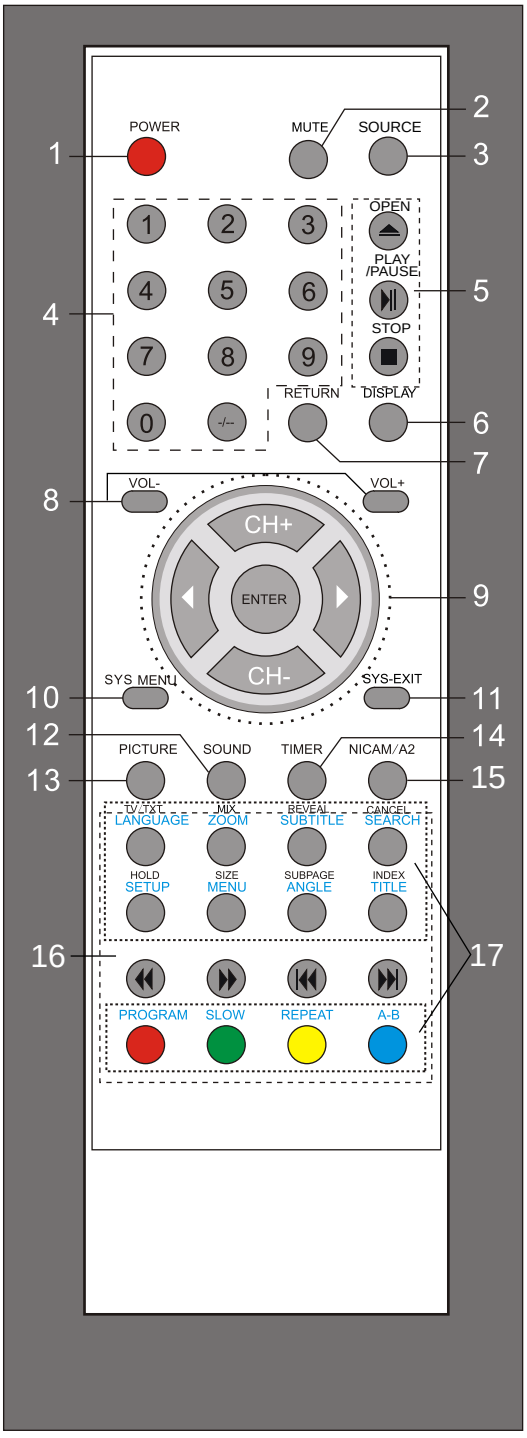

Note:
1. Fit two AA batteries, making sure that they are the correct way round, as marked on the case.
2. Aim the remote control at the window to keep the right side of the screen, and keep the window clear at all times.
3. Do not press the buttons on the remote control too quickly-allow time for the set to respond

1. **POWER**: Turn the TV on or turn it standby
2. **MUTE**: Silence status or cancel
3. **SOURCE**: Source select
4. **0-9, -/--**: Choose channel
6. **DISPLAY**: Display playing status
7. **RETURN**: Do to play the latest program
8. **VOL+/-**: Volume up/down
9. **CH+/-**: Channel up/down
   CH+/-,◀ ▶: Cursor buttons for OSD operation
   ENTER: Confirmation
10. **SYS MENU**: TV system menu
11. **SYS-EXIT**: Exit from the OSD menu
12. **SOUND**: Select the sound mode
13. **PICTURE**: Select the picture mode
14. **TIMER**: Time shutting down
12. **NICAM/A2**

Buttons for DVD operation

5. ⏏ : Load/eject DVD disc
   ⏯ : Play/pause DVD program
   ■ : Stop DVD program
16. **LANGUAGE**: Select DVD disc language
   ZOOM: Adjust picture size in DVD mode
   SUBTITLE: Turn on/off the DVD subtitle display
   SEARCH: DVD search, Tracks or Chapters
   SETUP: DVD system setup
   MENU: DVD play list/Disc menu
   ANGLE: Select DVD picture angle
   TITLE: DVD title
   ⏪ : DVD fast reverse
   ⏩ : DVD fast forward
   ⏮ : DVD previous chapter
   ⏭ : DVD next chapter
   PROGRAM: Edit the program and play
   SLOW: play DVD programs at slow speed
   REPEAT: Play the title or chapter once again
   A-B Select and play the preferable paragraph of DVD program by pressing this key twice at the beginning and end of it.

Buttons for TELETEXT

17. **TV/TXT**: Teletext on/off
   MIX: Display Teletext on top of the normal TV picture
   CANCEL: Turn off the Teletext display
   REVEAL: Reveal any hidden text, for example-quiz answer
   HOLD: Hold or carry on the current subpage
   SIZE: Press to see top half of page double size, Press again to see the bottom half of page double size
   Press again for normal size
   INDEX: Direct recall of page 100
   SUBPAGE: Go to subpage
   COLOUR BUTTONS: Short cuts-follow the coloured links in the text

Connection

Power Cord Connection

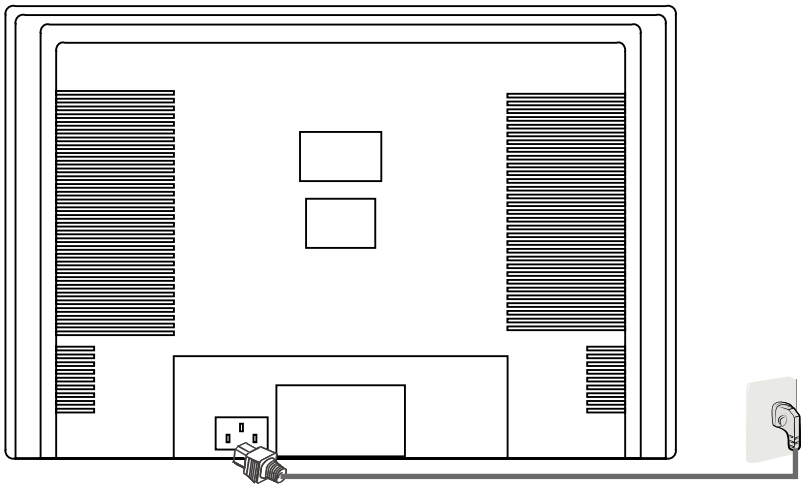

- Connect the power cord correctly as shown with the mains cable, and turn the switch (Page 6) on.
- When you connect the power, the TV set comes into standby mode and the LED indicator (Page 5) lights red.
- You could bring the TV out of standby mode by press the **POWER** button on TV set (page 5) or remote control(page 7), and the LED indicator lights green.

Antenna(RF) Connection

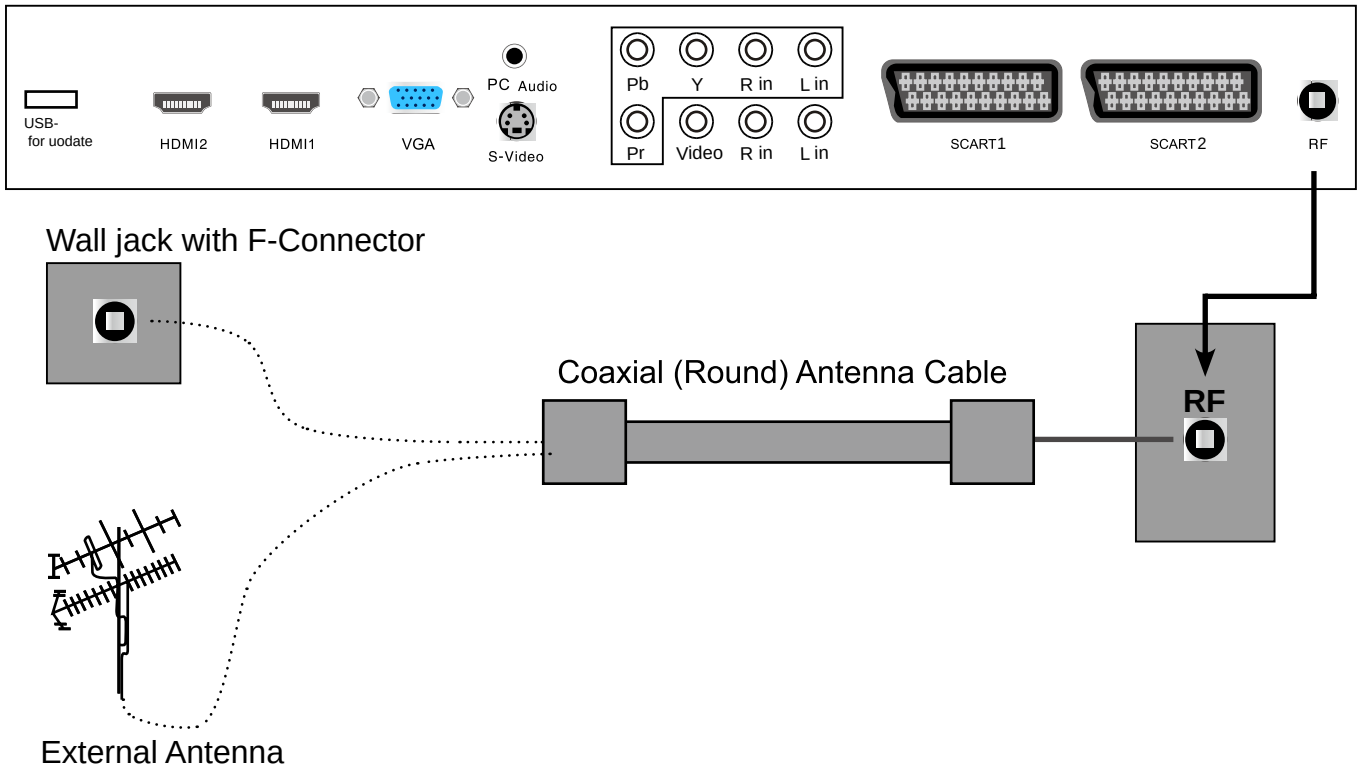

Press **SOURCE** button on the remote control to display the input source menu, press ∧ / ∨ button to select **TV**, then press **ENTER** button to confirm, and you will receive the signal.

Basic Operation

Power on/off

1. Connect to the power with a power code, and turn on the switch.
2.-To turn on the TV
Press **POWER** button on the TV or remote control.
-To turn off the TV
Press **POWER** button on the TV or remote control.

Input Source select

Press **SOURCE**button on the TV set or remote control to display the input source menu, and use **CH+/-** button on the TV set or ∧ / ∨ button on remote control to select the input source, press **ENTER** button on the remote control to enter.

Note: Before you select the input source, make sure the connections are prepared.

Basic buttons on the remote control

POWER: Turn the TV on/standby.
MUTE: Press to mute the sound, press again or press **VOL+** to unmute.
PICTURE: Press repeatedly to cycle through the available video picture modes.
SOUND: Press to cycle through the different sound settings.
NICAM/A2: TV Nicam/A2 select.
Number Buttons: Choose channel directly.
Press number buttons and press ENTER button to play the channel.
: Return to the previous channel viewed.
DISPLAY: Display the information of the current mode.
SYS-MENU: Press to display the OSD menu.
SYS-EXIT: Press to exit the OSD menu.
ASPECT: Press to change the screen display mode.
Thumbstick(〈 〉∧∨ **)**: Allows you to navigate the on-screen menus and adjust the system settings to your preference.
ENTER: CONFIRM button.
Timer: Shutdown timer.
SOURCE: Press to display the input source menu.
VOL+/-: Press to adjust the volume.
CH+/-: Press to scan through channels.

Basic OSD Menu operation

Press **SYS-MENU** button to display the OSD menu as below:

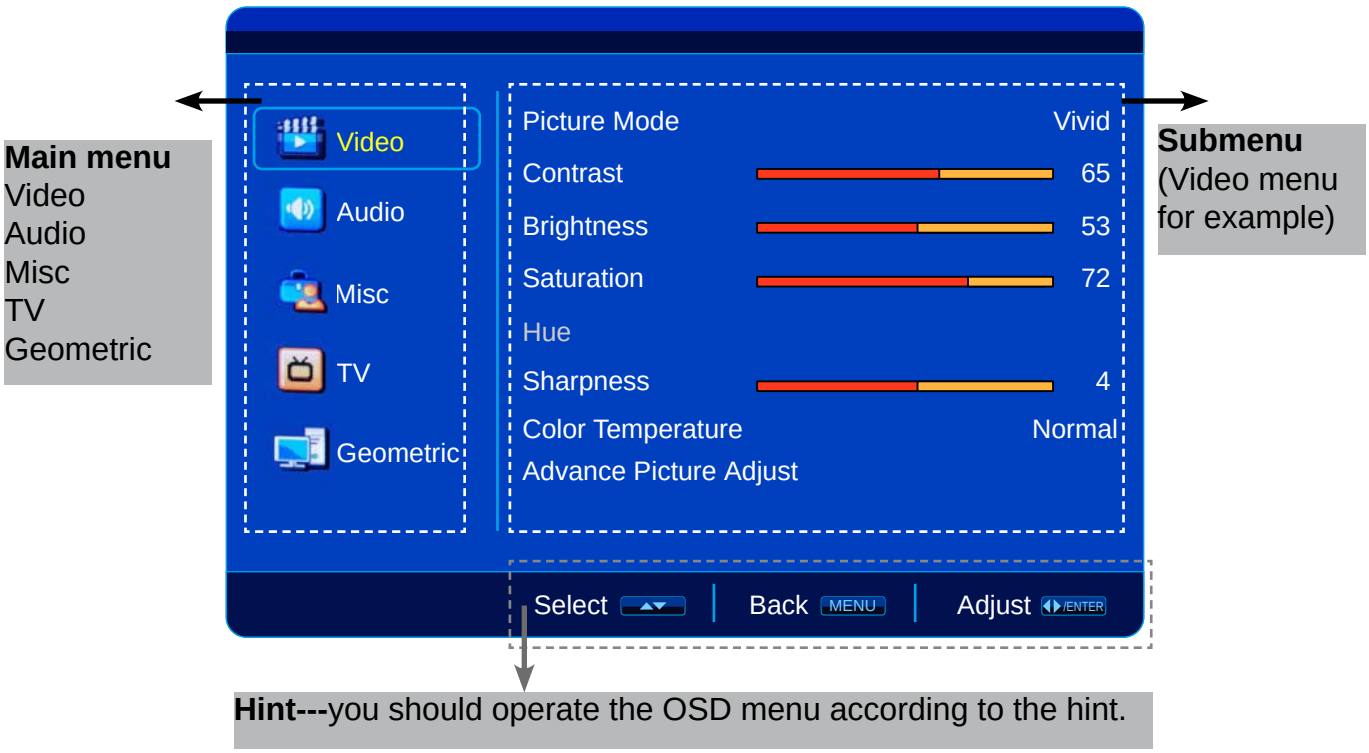

Use ∧ / ∨ button to select the main menu, and press 〉 button to enter the submenu(Fig.1). In the submenu, use ∧ / ∨ button to select the function item, and you could adjust(Fig.2) or select(Fig.3) with 〈 / 〉button, or enter the submenu(Fig.4) with 〉 button.
* (Press SYS-MENU button to return to the upper menu.)
* (Press SYS-EXIT button to exit the menu display.)

Note1: Only when you input the suitable signal, the relevant items can be activated
Note2: Please operating the OSD menu according to hint on the bottom of the banner.

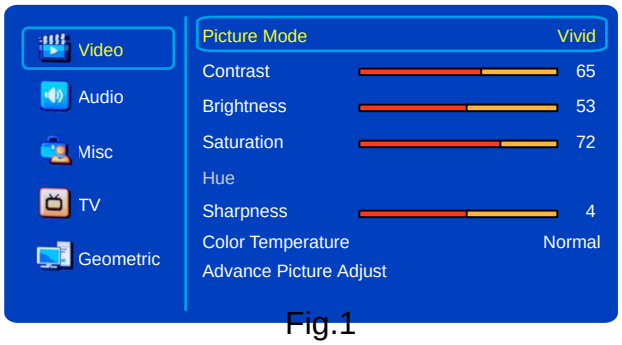

Fig.1

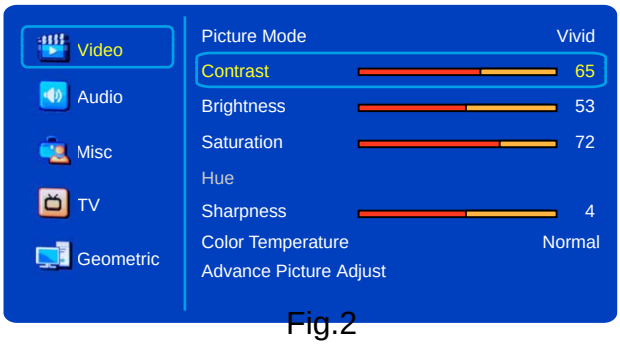

Fig.2

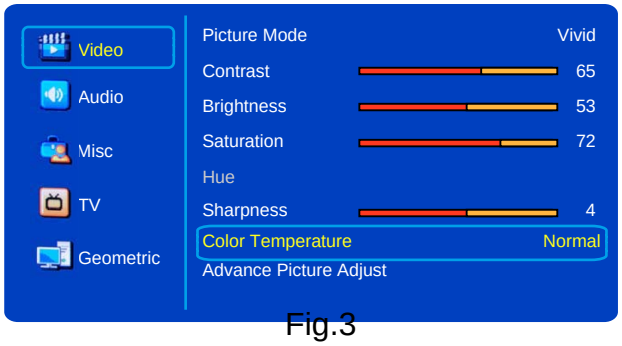

Fig.3

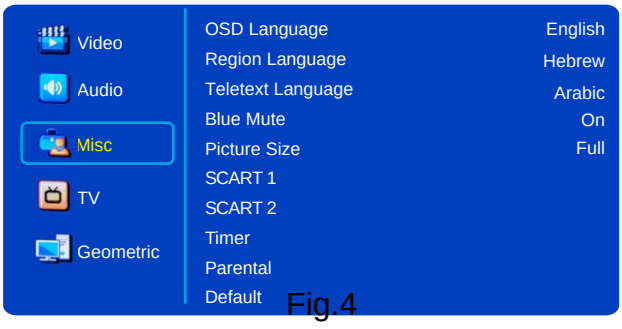

Fig.4

OSD Menu

1. Video menu

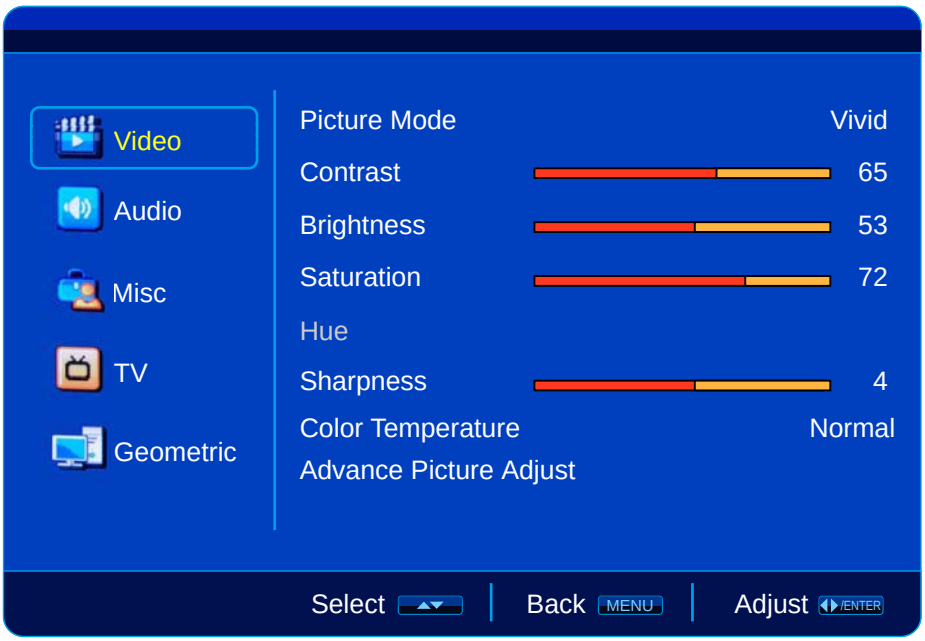

Description

Picture Mode: Select your desired picture mode.
You may select the picture mode directly by pressing the **PICTURE** button on the remote control.
Contrast: Adjust image contrast.
Brightness: Adjust image black level.
Saturation: Adjust image saturation.
Hue: Adjust the tint of the picture (in NTSC mode).
Sharpness: Adjust the sharpness.
ColourTemperature: Select an optimum color temperature mode to suit your eyes for viewing among User, Cool, Middle, Warm.
Note: You could not operate the Contrast, Brightness, Saturation, Sharpness and Color Temperature items when you select picture mode Vivid , Normal or soft.
Advance Picture Adjust:
DNR: If the broadcast signal received is weak, you can select the DNR option to reduce the video noise level between Off, Low, Mid and High.
Adaptive Luma Control: Adjust the brightness automatically.

2. Audio menu

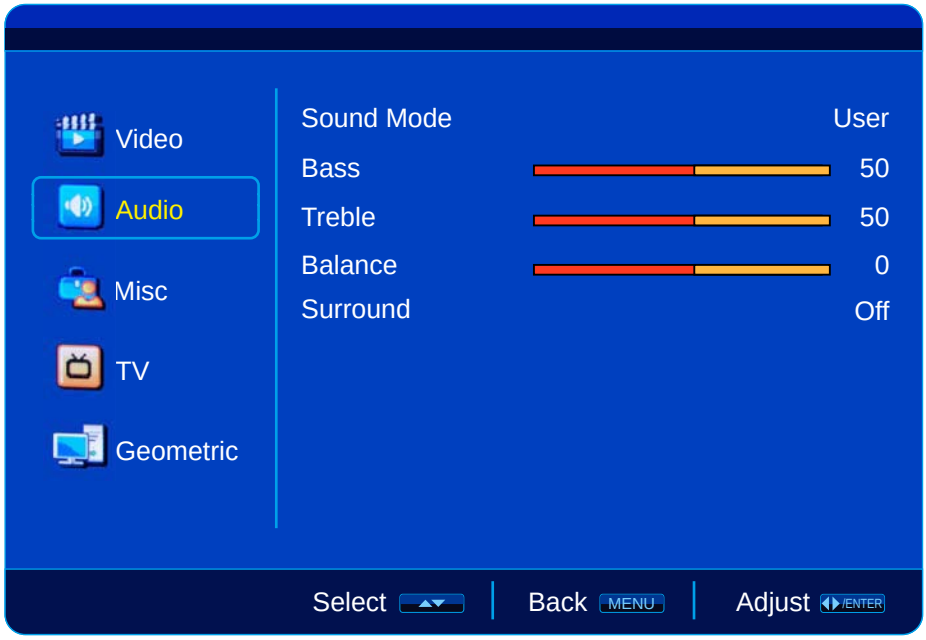

Description

Sound Mode: Select your desired picture mode.
You may select the sound mode directly by pressing the **SOUND** button on the remote control.
Bass: Adjust the level of the lower-pitched sounds.
Treble: Adjust the level of the higherpitched sounds.
Balance: Adjust the audio output between left and right speakers.
Surround: Turn on/off on the surround function.

3. Misc menu

Description(see next page)

Description

OSD Language: Select OSD language.
Region Language: Select Region Language.
Teletext Language: Select Teletext language.
SCART1/2: Select SCART mode .
Picture Size: Adjust Picture Size.
Blue Mute: Turn on/off the Blue Back function while no signal.
Timer: Timer settings, as the picture below.

Time: Display the current time.
Start Time: Set the on time of the TV.
Start Channel: Select the channel when the TV turns on at the time you set.
Start Activate: Activate the on time setting.
Start Time: Set the off time of the TV.
Stop Activate: Activate the off time setting.

Parental: Parental settings, as the picture below.
You should enter the code(Initial Password: 0000) to enter the Parental menu.

Channel Lock: Lock to playing a channel.
Video Lock: Lock to playing a input source.
Change Password: Change the pssword.
You have to enter the password to enter the Parental menu above.
Clear All: Reset all the Hotel Mode settings.

Default: Reset all the Misc settings.

4. TV menu

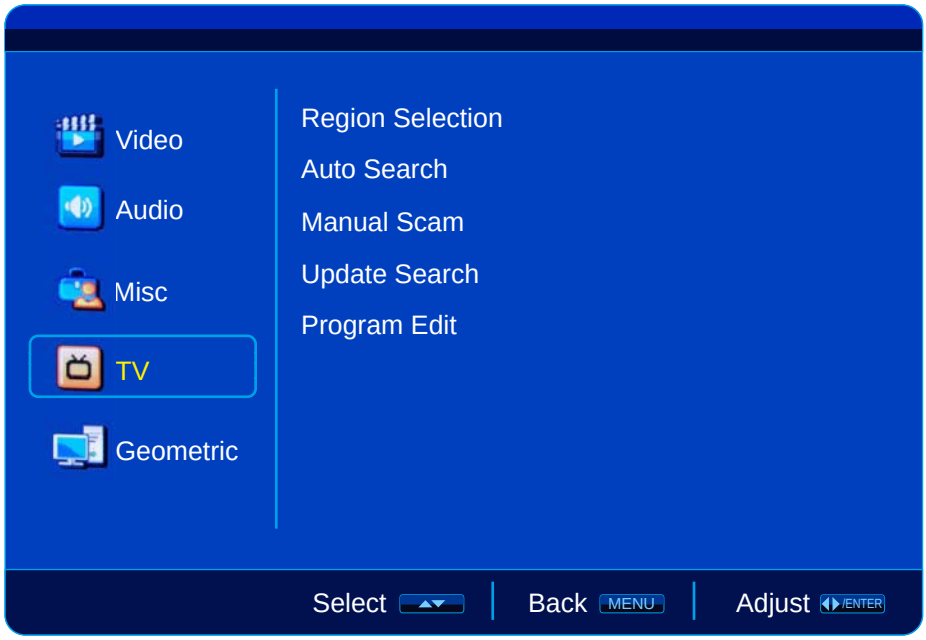

Region Selection: Select Region Language.
Auto Search: Start auto searching.
*Note: When the TV is auto tunning, you could press **SYS-MENU** button to stop auto tunning and return to preview menu.*

Manual Scan: Select a channel to manual scan as the picture below.

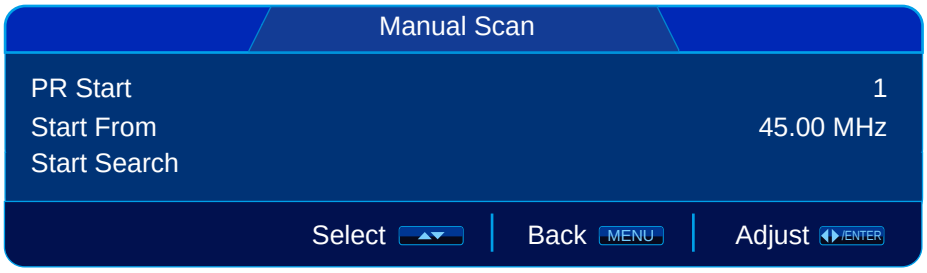

PR Start: Select the channel you want to manual scan.
Start From: Select the freq. you want to start from.
Start Search: Press ENTER button to start search.

Update Search: Save original programes and add newly searched programes.

Program Edit: Select a channel to manual scan as the picture below.

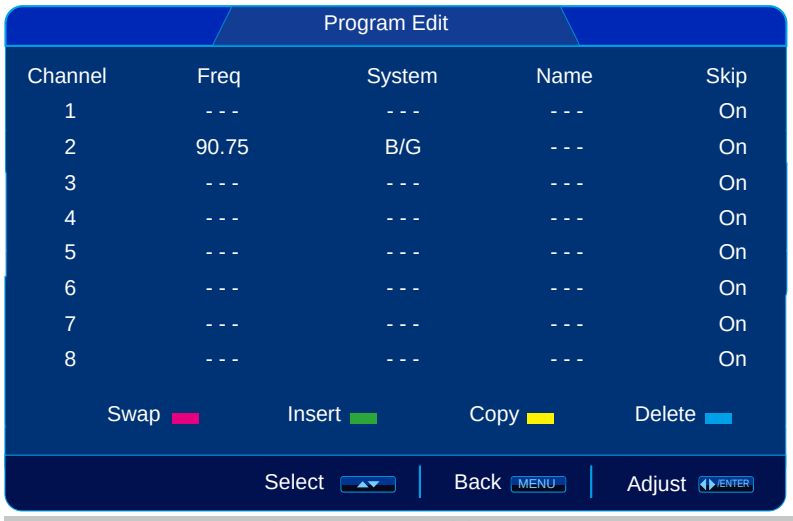
Program Edit
Channel Freq System Name Skip
1 - - - - - - - - - On
2 90.75 B/G - - - On
3 - - - - - - - - - On
4 - - - - - - - - - On
5 - - - - - - - - - On
6 - - - - - - - - - On
7 - - - - - - - - - On
8 - - - - - - - - - On
Swap Insert Copy Delete
Select Back MENU Adjust ENTER

Swap: Swap two channels' position.
Select the channel, and press **RED** button, then select the channel you want to swap, and press **ENTER** button to swap.

Insert: Insert a channel.
Select the channel, and press **Green** button to pick-up, then select the position you want the channel to be inserted to, and press **ENTER** button.

Copy: Copy a channel.
Select the channel, and press **YELLOW** button to copy, then select the position you want the channel to be copied to, and press **ENTER** button.

Delete: Delete a channel.
Select the channel, and press **BLUE** button to delete the channel.

5. PC menu

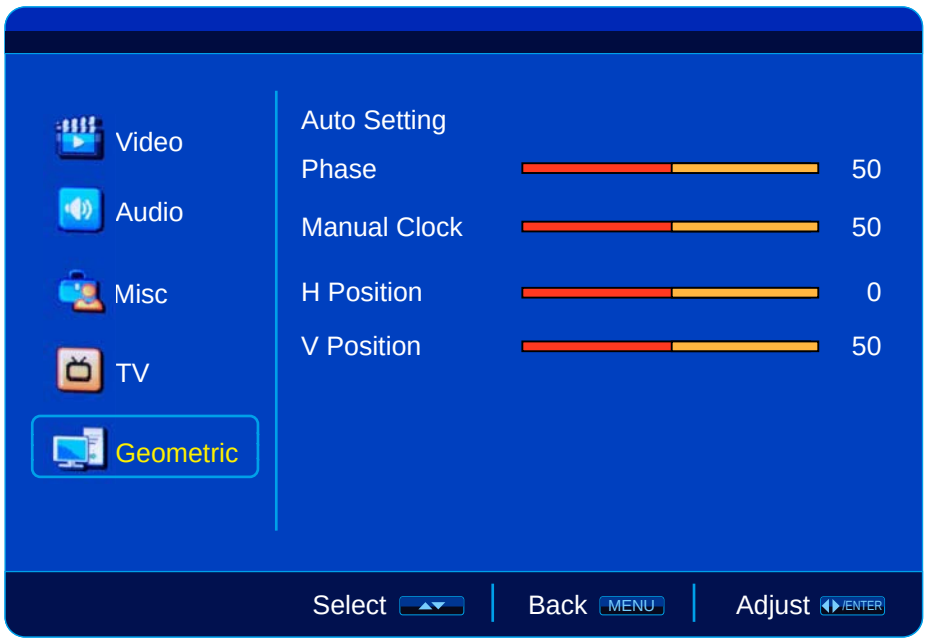

Auto Setting: Press button to setup the parameter of the screen automatically

Phase: Adjust the phase of the ADC sampling clock relative to the sync signal, until a stable image is obtained.

Manual Clock : Adjust the pixel clock frequency, until the image size is maximized for the screen.

H/V Position: Adjust the transverse/vertical position of the screen.

DVD Operation

Press the Power button on the TV or the remote control, then press the SOURCE button to select DVD mode.
If there is no disc in the DVD player the screen will show "NO DISC".
It will play once you put in the disc. Press source to DVD mode play the disc.

Place a disc

Insert a disc according to the silk.
Do not touch the playing surface.
Hold the disc around the outside with your fingers and place the disc into the slot. The player will automatically draw the disc into the player.
To "Eject" the disc, press the "⏏" button on the remote control or the EJECT button on the TV .

Play

The contents of each disc vary, as to how the disc was authored and what features are included. Some discs start playing as soon as they have been read, some need "Play" selecting in the Menu. Different play modes are offered, such as Menu Play, Sequence Play and other modes.

Menu Play

1. Compatible with DVD, SVCD or VCD2.0.
2. If the disc is a DVD, ROOT MENU will appear on the screen. If it is SVCD or VCD 2.0, please press the Menu button to see the menu.
3. When a DVD disc is loaded, press the Arrows buttons to highlight the menu item you want to choose. With SVCD or VCD 2.0, press the numeric buttons to select a track to play.
4. Press ENTER or Play to start when highlighted.
5. Return to Menu when Playing: When playing a DVD disc press the Menu button to return to the "ROOT" menu. When playing a SVCD or VCD, and PBC is "on" press the Menu or Return button to return to the disc menu.

Title Play

1. Compatible with DVD discs only.
2. During DVD playback, press Title button to display the DVD title content.
3. Press the Arrow buttons to highlight the title you want to choose, and press Enter; also you can press numeric buttons to choose.
4. The DVD player begins with the chapter 1 of the chosen title.

Sequence Play

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. When a SVCD or VCD disc is loaded and PCB is "on", press the MENU button once switches the PBC "off". The player can now playback in sequence mode. To turn the PBC back on press the MENU button again.
3. Except for SVCD or VCD discs, when in stop state, press the Play button, the player will play in the "Sequence" mode. This is for all compatible discs.

Program Play

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. The Program Playback option allows you to enter the order in which you want chapters or tracks to play, maximum to 16.
3. Program Menu: If PBC is on, this operation will turn PBC off while the chapters / tracks play in programmed order.
4. According to the highlight, use the Numeric buttons to enter the chapters / tracks in the order you want them to play. Then press Play or use Arrow buttons to highlight the "PLAY" item and press Enter. The chapters /tracks will play in the programmed order. You can program maximum 16 titles / chapters / tracks.

5. According to the Direction Indicator on the menu, you can press Arrow buttons to highlight where you want to enter.
6. During Program Playback, if program button is repressed, the program order and the contents will be displayed on the screen, and the Program Playback will be stopped; also you can press Stop and Play to resume normal playback.
7. Notes:
   To clear the program order, use Arrow buttons to highlight the "CLEAR" item, then press Enter.
   To modify the program order, use Arrow buttons to highlight the item you are changing and enter the new chapter / track you want to program directly.
8. The program indicator in the screen and the playing chapter / track illuminate.

Additional operation

Selecting Tracks

1 . Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. When playing a DVD disc, press Numeric buttons on the menu or title page to select tracks; During DVD playback, you can input desired title numbers directly.
3. During sequence playback of a SVCD or VCD disk, press the numeric buttons to select tracks. (During Program Playback and when the PBC is on, you can only press Prev / Next button to select)
4. As for CD, HD-CD, discs, press Numeric buttons directly to select tracks.
5. When playing WMA, Digital Audio disc/JPEG discs, press Numeric buttons to select different tracks on current track list.

Skipping Tracks

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. To skip forward to the beginning of the next title / chapter / track on a disc, press Next on the remote or the right side of the player.
3. To skip backward to the beginning of the preceding title / chapter/track on a disc, press Prev on the remote or the right side of the player.

Multispeed Fast/Slow Motion Play

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. Press the Multispeed Fast/Slow button on the remote during play to search through a disc. Multispeed Fast/Slow has four speeds: x2, x4, x8, x20.
   With each consecutive press of the button, the search speed increases. If you press the button five times, Fast Multispeed Fast/Slow cycles back to normal play.
3. During DVD play, when Multispeed Fast/Slow gets to the beginning of the next title / chapter, it resumes normal play; During SVCD or VCD play with PBC on, when Fast Forward Play gets to the beginning of the next track, it resumes normal play.

Multiphase Slow Motion Play

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc/JPEG discs.
2. Multiphase Slow has six speeds: 1/2, 1/3, 1/4, 1/5, 1/6, 1/7 of the normal Speed play when pressing the "Slow" button consecutively when playing discs.
3. When you press Play or the "Slow" button 7 times the player returns to normal play.

Freeze Frame

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc/JPEG discs.
2. During CD, HD-CD, WMA or Digital Audio disc / JPEG playback, press Pause once to freeze playback; Press Play button to resume normal playback.

Using the Repeat Feature

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.

2. While a disc is playing, press Repeat button once and the repeat banner appears to show current repeat mode.

a) In SVCD, VCD, CD, HD-CD, WMA or Digital Audio disc/JPEG sequence playback mode. Press Repeat button again to turn on repeat mode. Press the button again on the remote to turn to the next repeat mode. There are three repeat options: Off, Track Repeat and Disc Repeat. With each consecutive press of the button, the repeat mode switches. If you press the button four times, repeat mode cycles back to Off.

b) In DVD playback, press Repeat button again to turn on repeat mode. There are three repeat options: Off, Chapter Repeat and Title Repeat. With each consecutive press of the button, the repeat mode switches. If you press the button four times, repeat mode cycles back to Off.

c) In WMA, Digital Audio disc /JPEG playback, press Repeat button again to turn on repeat mode. There are four repeat options: Off, Track Repeat, Directory Repeat, and Disc Repeat. With each consecutive press of the button, the repeat mode switches. If you press the button five times, repeat mode cycles back to Off.

Using the Display Feature

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc discs.
2. Loading and playing DVDs (two pages)
- Press DISPLAY button once to show the first page:
- "Disc Type, Title * / * (the playing title / total titles), Chapter * / * (the playing chapter / total chapters), Elapsed Time of the Disc".
- Press the button again to show the second page:
- "Language */* (the serial number of playing language / the amount of optional languages) or Off, Language Type, Audio Type, Subtitle * / * (the serial number of playing subtitle /the amount of optional subtitles) or Off, Angle * / * (the serial number of playing angle / the amount of optional angles) or Off".
- Press the button for the third time, the display menu fades out.
3. Loading and playing SVCD discs (two pages)
- Press Display button once to show the first page:
- "Disc Type, Track * / * (the playing track / total tracks), Mute, PBC, Repeat Mode, Elapsed Time of the Playing Track".
- Press the button again to show the second page:
- "Language * / * (the serial number of playing language/ the amount of optional languages) or Off, Language Type, Audio Type, Subtitle * / * (the serial number of playing subtitle / the amount of optional subtitles) or Off".
- Press the button for the third time, the display menu fades out.
4. Loading and playing VCD
- Press Display button once to show the first page:
- "Disc Type, Track * / * (the playing track / total tracks), Mute, PBC, Repeat Mode, Elapsed Time of the Playing Track".
- Press the button again, the display menu fades out.
5. Loading and playing CD, HD-CD, WMA, Digital Audio / JPEG discs
- Press Display button once to show the first page:
- "Disc Type, Track * / * (the playing track / total tracks), Mute, Repeat Mode, Elapsed Time of the Playing Track".
- Press the button again, the display menu fades out.

Using the Search Feature

1. Compatible with DVD, SVCD, VCD, CD, HD-CD discs.
2. You can use Search feature to select a title/ chapter/track number or go to a specific point in a title. First, press GOTO button on the remote controller to bring up the search menu and enter the edit state. Secondly, press Arrow buttons to highlight the title / chapter/ track number or the time option; Thirdly, use Numeric buttons to enter the title / chapter/ track you want to play or the elapsed time you want to go to in that title. At last, press ENTER button to start playback.
   For example, entering 01:23:56 will start playback one hour, twenty-three minutes and fifty-six seconds into the title.

3. Notes
a) This feature does not work in Program Play mode.
b) If PBC is on, it will turn off automatically when Search Playback starts.
c) When playing WMA, MP3 / JPEG discs, Search Feature does not work.

Changing the Soundtrack or Language

1. Compatible with DVD SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. Press the LANGUAGE button to display current soundtrack.
a) Press the button to switch soundtracks.
b) Press the button again on the remote to turn to next soundtrack.
3. When playing a SVCD or VCD disc, there are five soundtracks: Stereo (L/R), L/L, R/R, L/L Auto A/D Detect, and R/R Auto A/D Detect. With each consecutive press of the button, the soundtrack switches. If you press the button six times, soundtrack cycles back to Stereo.
4. When playing a CD, HD-CD, WMA, Digital Audio disc, there are three: Stereo (L/R), L/L, and R/R.
5. When playing a DVD or SVCD disc, press LANGUAGE button to display current language, press the button again to turn to next language if the disc has different languages.

Subtitles

1. Compatible with DVD, SVCD discs.
2. Press the Subtitle button on the remote once, and the subtitle info banner appears
3. When a DVD or SVCD is recorded with subtitles, you can use the Subtitle feature to view the subtitles on-screen. By default, subtitles are off. The info banner will display Subtitle Off.
4. To display subtitles, press the Subtitle button again. The default language with its responding serial number will be displayed in the info banner and subtitles will be displayed in that language. There are 8 supported subtitles: Chinese, English, Japanese, French, Spanish, Portuguese, Germany and Latin. With each consecutive press of the Subtitle button, the subtitle switches.
For example, "Language Icon: [1 English DTS 6CH] or [Off]" (the availability of the subtitles are disc-dependent). To turn subtitles off, press the Subtitle button until Subtitle Off is displayed.

Mute the Audio Output

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc /JPEG discs.
2. Pressing the Mute button allows you to reduce sound to an inaudible level, and the icon of "MUTE" will be displayed on screen. Press the button again or press the Vol +/- button to return to the normal condition.
3. If the player has no sound, check that the "Mute" is not on.

Zoom In the Video Image

1. Compatible with DVD, SVCD, VCD, JPEG discs.
2. The Zoom Function allows you to enlarge the video image.
3. Press Zoom repeatedly to activate the function and choose the required zoom factor: Zoom 2, Zoom 3, Zoom 4, Zoom 1 /2, Zoom 1 /3, Zoom 1/4, Zoom Off.

Repeat a Specific Segment on the Disc that You Define

1. Compatible with DVD, SVCD, VCD, CD, HD-CD, WMA, Digital Audio disc.
2. During normal or fast playback, press the A-B button once. REPEAT "A" appears on the screen. This indicates the start point of the loop.
3. Press A-B again, REPEAT A-B will be shown, this indicates the end point of the loop.
4. The segment will now be repeated until you press the "REPEAT" button again to turn off the feature.
5. Press A-B again to cancel the loop points.
6. When playing a SVCD, VCD, or CD disc, you can repeat a specific segment only in one track. When the next track begins, A-B Repeat turns off automatically.
7. When playing a DVD disc, you can repeat a specific segment only in one title.

Digital Audio Disc

1. Compatible with Digital Audio discs
2. The player will search the disc directory automatically and display the contents on screen.

3. The player will then start to play the first track, of the selected directory.
4. To change directories use the direction buttons.

DVD System Operation

System operation will define the setting of the set; these definitions will be stored until you change them again.

General Steps of Setup Menu

1. Pause or Stop the player. Press **DVD-SETUP** on the remote control. The main menu will be shown as below.

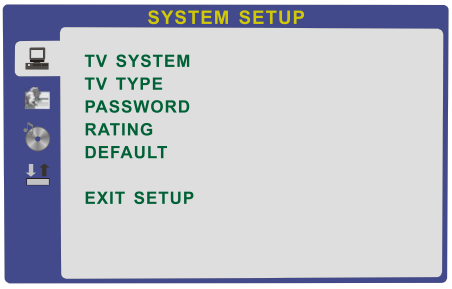

2. Press the ⇧ / ⇩ (CH+-) buttons to select the Icon of the desired section, e.g. “TV System" and press ⇨ button to open that section.
3. Press ⇧ / ⇩ (CH+-) to select the desired feature and again press ⇨ button to open that section.
4. Press ⇧ / ⇩ (CH+-) to select the desired feature and then press "OK" to select the new setting.
5 To exit the menu, press "DVD-SETUP" or ⇩ (CH-) to select EXIT SETUP and then press "OK"
When launching the setup routine, the pressing of the following buttons will turn off the setup menu, while the choices that have been changed will be saved.

Menu specification

1. SYSTEM SETUP

The system setup options are illustrated below:

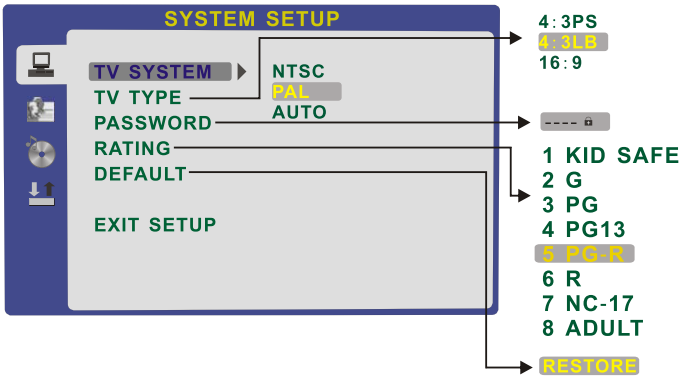

To view pictures on a slid show, open the folder where pictures are and press ▶/Ⅱ button.
Note: Do not press ▶/Ⅱ button after open a picture.

TV SYSTEM
According to the Color system of your TV, select proper TV TYPE.
PASSWORD
The password option is initialized as locked. You cannot set the ratings limit or change the password.
To enable these features you must unlock the Password. The default password is "0000". Using the ⇧ / ⇩ (CH+-) button, move the highlight to "PASSWORD", press the ⇨ button and enter "0000". You will see the padlock symbol open. You may now change the RATING or put in a new password number.
If the Lock symbol is BLUE you must press the ⇨ button to enter the lock field, the lock symbol will change to YELLOW, you may now enter a new 4 digit number. Please remember or write down the new Password and keep safe.

RATING
The Rating feature is a rating limit feature, like movie ratings. This helps you to control what DVD the family watches. There are 8 levels of selection, from KIDS SAFE to ADULT. Adult is the "play all" selection.

2. LANGUAGE SETUP

The language setup options are illustrated below:

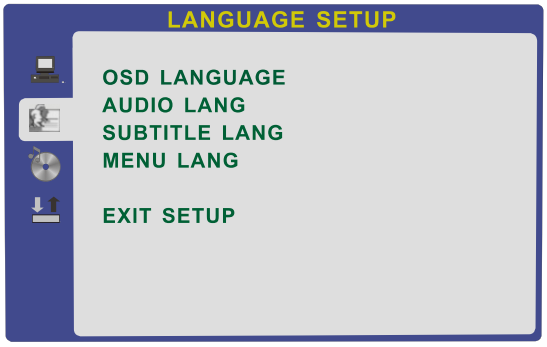

- OSD LANGUAGE: The OSD will display in the language you choose.
- AUDIO LANG: If the disc you are playing has the language you choose, it will output audio in that language.
- SUBTITLE LANG: If the disc you are playing has the language you require you may select this either in the Menu or using the "SUBTITLE" button on the Remote control. You may also switch this OFF.
- MENU LANG: If the disc you are playing has the language you require you may select this.

3. AUDIO SETUP

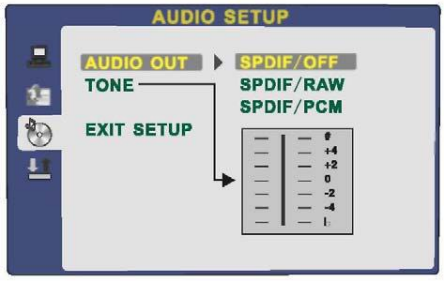

- Highlight the AUDIO OUT option, and press the Arrow buttons to choose the audio output mode you prefer. Press Enter to confirm; There are 3 optional audio output modes: SPDIF /OFF, SPDIF / RAW, and SPDIF/ PCM.

  SPDIF/ RAW is for amplifiers with a built in digital decoder. SPDIF/PCM is selected for amplifiers with no built in digital decoder.

-TONE: Use the ⇧/⇩(CH+-) button to move the scroll and adjust the tone.

4. DIGITAL SETUP

The video setup options are illustrated below:

- DYNAMIC RANGE: Use the ⇧/⇩(CH+-) button to move the scroll and adjust the dynamic range.
- DUAL MONO: Choose the mode of the audio output.
- There are four modes: STEREO, MONO L, MONO R, MIX MONO.

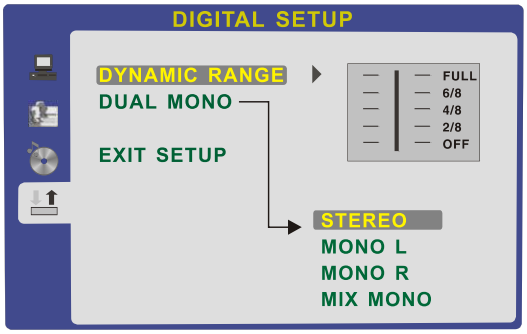

Disc Care

About Disc Terms

Title

Generally, pictures or music compressed on a DVD are divided into several sections, "title".

Chapter

The smaller section unit of picture or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching, but some discs may not have a recording chapter.

Track

A segment of picture or music on a CD, Each track is numbered for searching.

Care of Disc

Video disc contains high-density compressed data that needs proper handling.

1. Hold the disc with fingers by outer edge and/or the center spindle hole. Do not touch the discs surface.
2. Do not bend or press the disc.

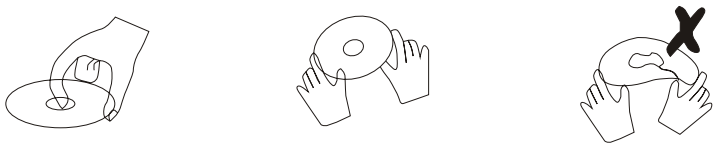

3. Do not expose the disc to direct sunlight or heating sources, Stere discs in cabinet vertically, and in dry condition.

Prevent exposure to:
Direct sunlight
Heat or exhaust from a heating device
Extreme humidity
Clean the disc surface with a soft, dry cleaning cloth, Wipe the disc surface gently and radically from center toward the outer edge.
Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.

Simple Troubleshooting

If the display fails or performance dramatically deteriorates check the Display in accordance with the following instructions.Remember to check the peripherals topinpiont the source of the failure.
If the display still fails to perform as expected,connect your helpline for assistance.

No power
- Check all connections to the TV.
- Press either the power button or the Standby button on the Remote control.

No picture or sound
- Ensure that the TV is plugged in and the power is on.
- Ensure that the aerial is connected.
- Try a different programme.

Poor picture quality
- Check the aerial connections.
- Check that the channel is tuned in properly.
- Adjust the picture settings:brightness,colour,sharpness,contrast,hue.
- Make sure that the TV is not located close to electrical appliances that may emit radio frequency interference.

No colour
- Adjust the colour setting.
- Check that the programme is broadcast in colour.
- Check that the cannel is tuned properly.

TV does not respond to remote control
- Check that there are no obstructions between the remote control and the unit.
- Check that the remote control is within range of the unit.
- Check that the batteries in the remote control and not weak or exhausted.

This LCD TV is for household use and registered as harmless on electromagnetic waves. Therefor,you can use it in every location as well as residential areas.

Technical Specifications

LCD Panel	Panel Size	26 inch(diagonal)
	Brightness	600 cd/m^2
	Contrast	5000:1
	Resolution	1366x768
Input Connector	Video	1
	Audio(L/R)	1
	S-VIDEO	1
	VGA	1
	PC Audio	1
	HDMI	3
	SCART	1
	YPbPr	1
	RF	1
Power Source		AC100-240V 50/60Hz
Power Consumption		160W

The cabinet design and electronics specifications will be modified without prior notice for improving the performance.